

MODEL: 50323RK
ASSEMBLY INSTRUCTIONS
READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS FOUNTAIN SHOULD TAKE APPROXIMATELY 10 MINUTES TO ASSEMBLE.


MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

UNPACK THE FOUNTAIN

YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS: FOUNTAIN BODY, PUMP, LID AND A BAG OF RIVER STONES.


FOUNTAIN ASSEMBLY

- 1. ATTACH PUMP TO RUBBER HOSE FROM BACK OF FOUNTAIN BODY.**

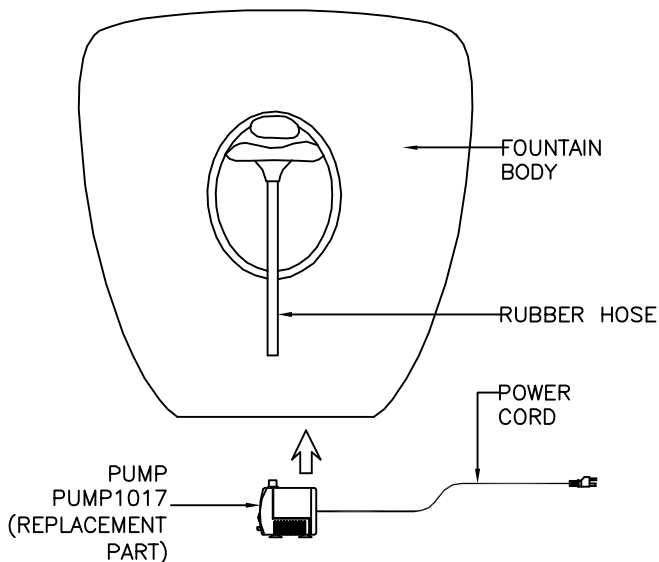

BACK VIEW:

- 2. PLACE THE PUMP INTO FOUNTAIN BODY FROM ENTRY, THEN ATTACH LID TO BACK OF THE FOUNTAIN BODY TO COVER THE ENTRY.**

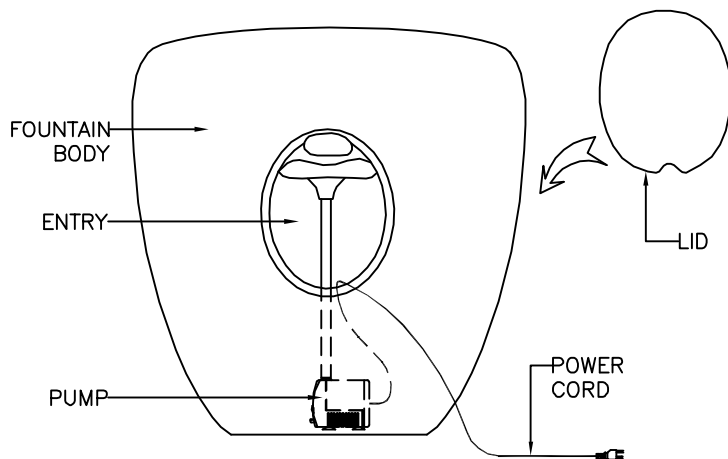


BACK VIEW:

*** IF THE SPRAYER IS NOT DESIRED, SKIP TO STEP #4.**

**** IF THE SPRAYER IS DESIRED, FOLLOW THE INSTRUCTIONS AS BELOW.**

- 3. ATTACH SPRAYER TO PLASTIC TUBE IN FOUNTAIN BODY.**


NOTE: YOU CAN ADJUST THE WATER FLOW CONTROL VALVE TO CONTROL THE SPEED OF THE WATER FLOW.

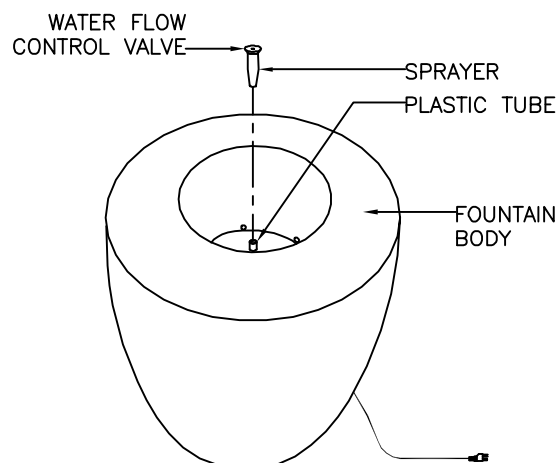

- 4. PLACE DECORATIVE RIVER STONES INTO FOUNTAIN BODY AS SHOWN.**

- 5. FILL RESERVOIR WITH 3 GALLONS OF WATER FROM TOP OF FOUNTAIN BODY TO COMPLETELY SUBMERSE THE PUMP.**

NOTE: DISTILLED WATER IS RECOMMENDED TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD-UP.

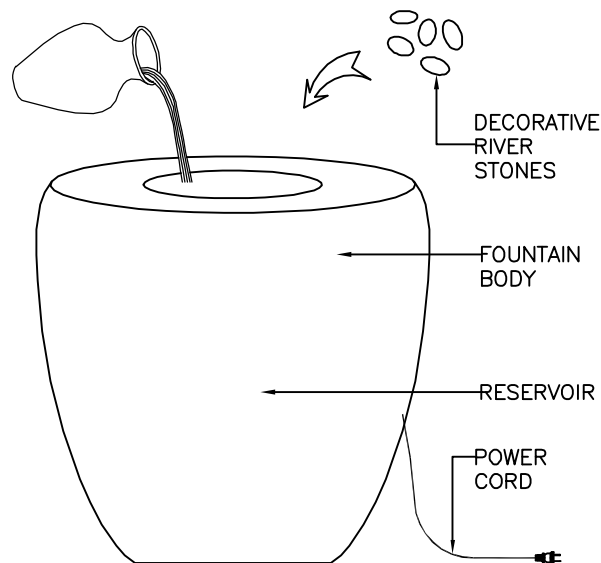

- 6. PLUG POWER CORD INTO AN OUTLET, YOUR NEW FOUNTAIN IS READY FOR USE.**

MODEL: 50323RK
ASSEMBLY INSTRUCTIONS
READ AND SAVE THESE INSTRUCTIONS

TROUBLE SHOOTING:

1. IF YOUR FOUNTAIN DOES NOT WORK, CHECK PLUG AT THE SOCKET. MAKE SURE THE PLUG IS FULLY AND PROPERLY INSERTED INTO THE WALL OUTLET.
2. NEXT CHECK TO MAKE SURE THE OUTLET IS POWERED.
3. IF THE FOUNTAIN STILL DOES NOT WORK, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

SPLASHING DISCLAIMER:

SPLASHING MAY OCCUR WHEN FOUNTAIN IS INITIALLY TURNED ON. PROTECT SURROUNDING SURFACES AS NEEDED.

IMPORTANT PUMP INFORMATION:

PUMP MUST BE FULLY SUBMERSED IN WATER WHILE OPERATING.

WATER:

TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD UP THE USE OF DISTILLED WATER IS RECOMMENDED.

IMPORTANT SAFETY INSTRUCTIONS:

THIS FOUNTAIN IS RATED FOR OUTDOOR USE.

WARNING:

* ONCE A WEEK INSPECT FOUNTAIN, FLOOR AND ADJACENT WALL FOR MOISTURE BUILD-UP AND CLEAN AS NECESSARY. THIS IS ESPECIALLY IMPORTANT FOR HUMID ENVIRONMENTS.

** THIS UNIT MUST BE CONNECTED TO A SUPPLY CIRCUIT THAT IS PROTECTED BY A GROUND FAULT CIRCUIT INTERRUPTER (GFCI). THE GFCI SHOULD BE TESTED ON A ROUTINE BASIS. TO TEST THE GFCI, PUSH THE TEST BUTTON. THE GFCI SHOULD INTERRUPT POWER. PUSH THE RESET BUTTON. POWER SHOULD BE RESTORED. IF THE GFCI FAILS TO OPERATE IN THIS MANNER, THE GFCI IS DEFECTIVE.

AVAILABLE PART IS: PUMP1017 (PUMP)
--